


TYPICAL FOUNDATION AND STORM DRAINAGE SYSTEM

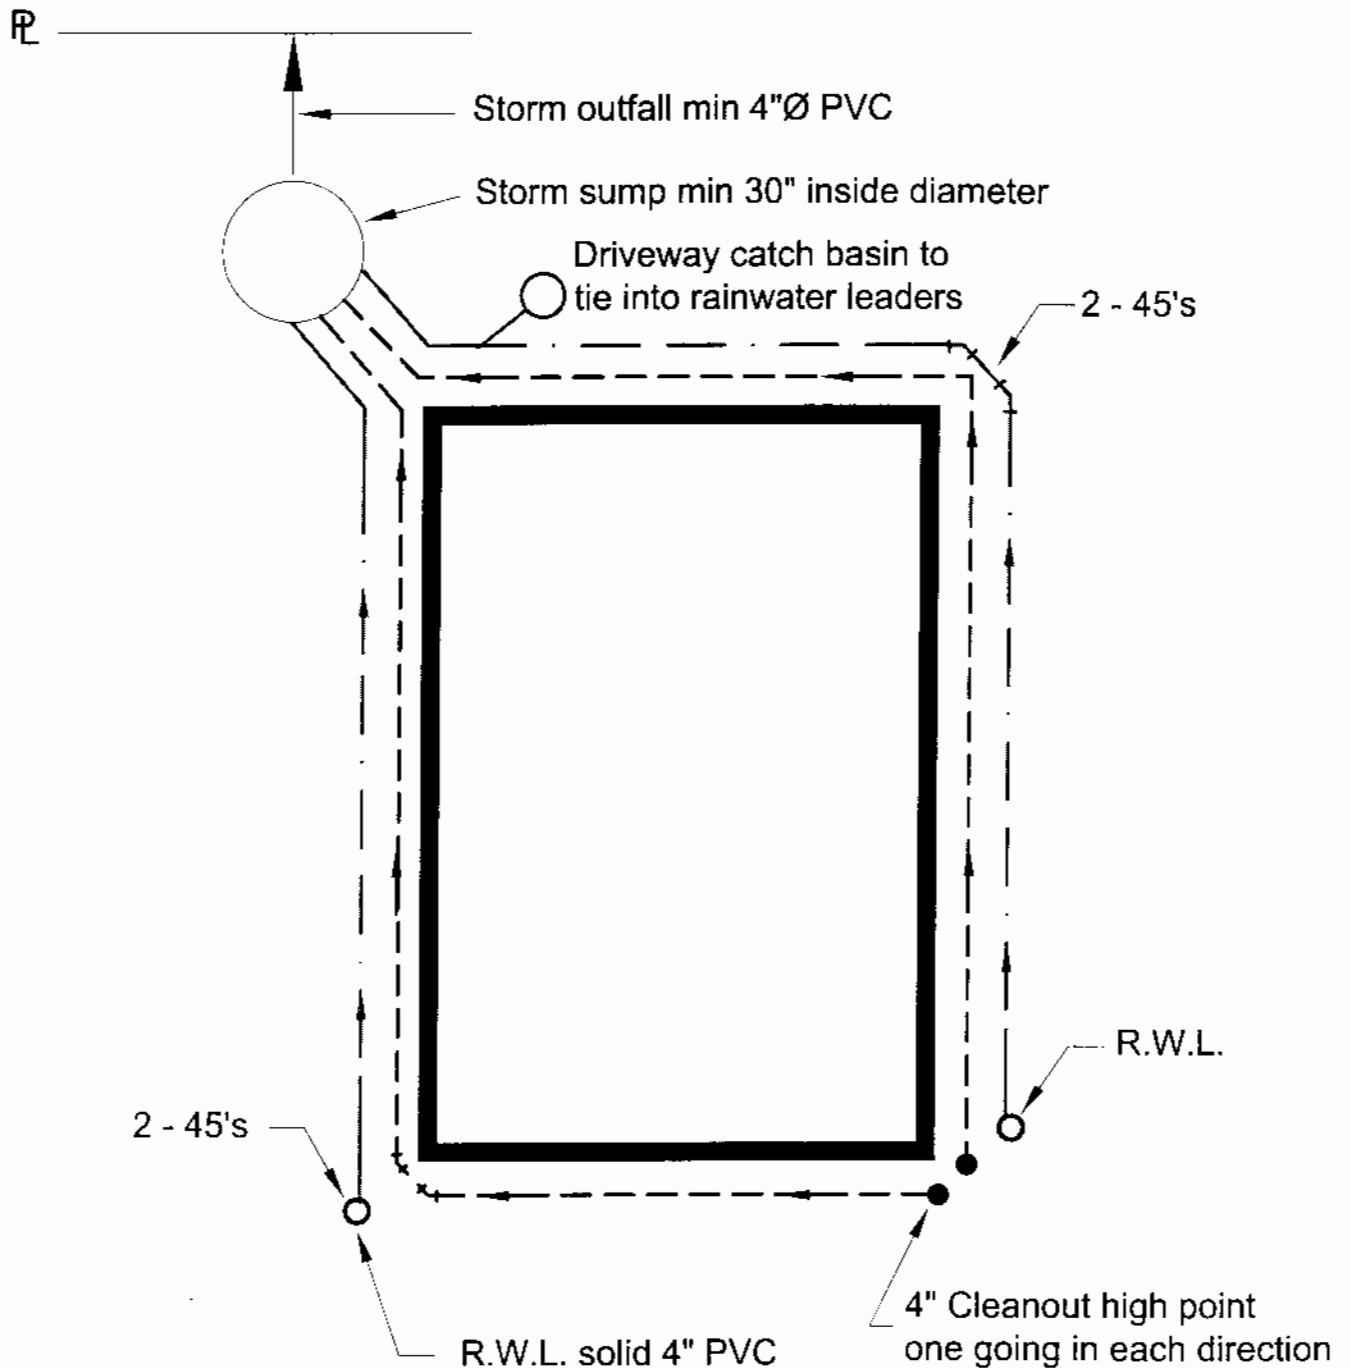

NOTES:

1. Separate 4" solid pipe rain water leader system
2. Connect rain water leaders (RWL) and drain tile piping into sump separately.
3. DRAINTILE depth greater than 48" to be perforated PVC, not 'Big O'.
4. Storm sump of 60" or greater depth requires rung access and min 36" inside diameter.
5. Top of dRAINTILE to be installed below underside of basement slab.